

Firmware Upgrade Instructions

Go to the Accudose WEB site
<https://accu-dose.com>

Home Products Find a representative Industry Downloads More...



Click on Downloads



Firmware Update

AccuDose 0.3.0-0



Download the Accudose 0.3.0-0 Firmware

Next Page




Firmware Upgrade Instructions

Connect to WIFI network

RMC_*****



Desktop or Laptop Computer

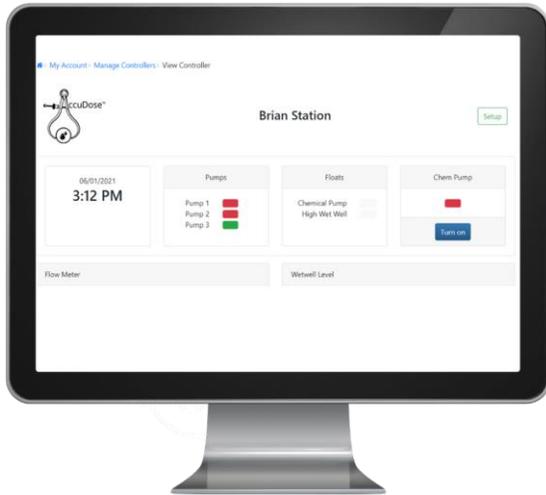

Phone or Table



Open WEB Browser and type in
192.168.4.1

Click on the gears in bottom
right corner

Next Page




Firmware Upgrade Instructions


Main UI Screen Opens



Click the Setup Button

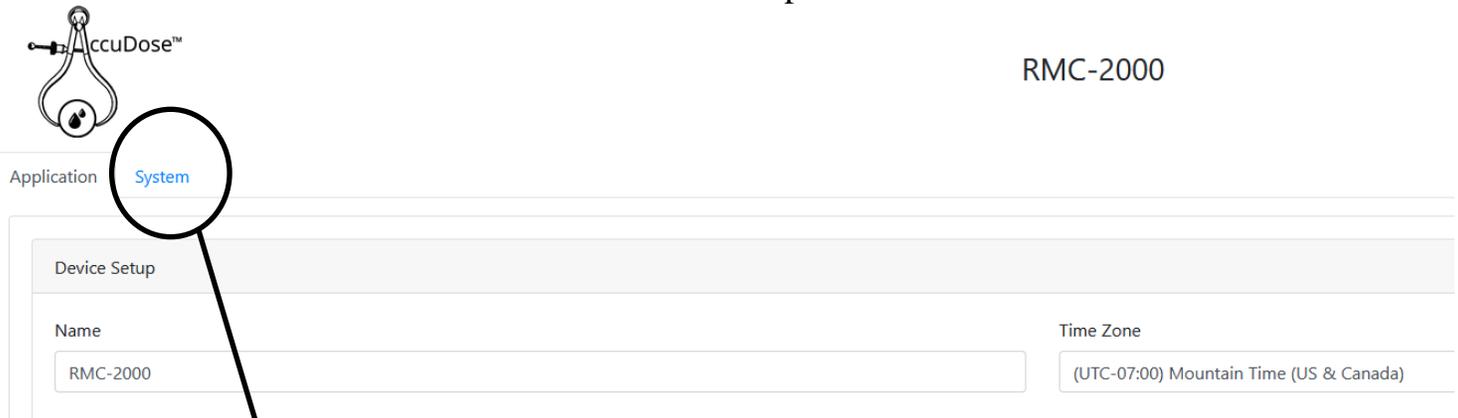

Click the System Button

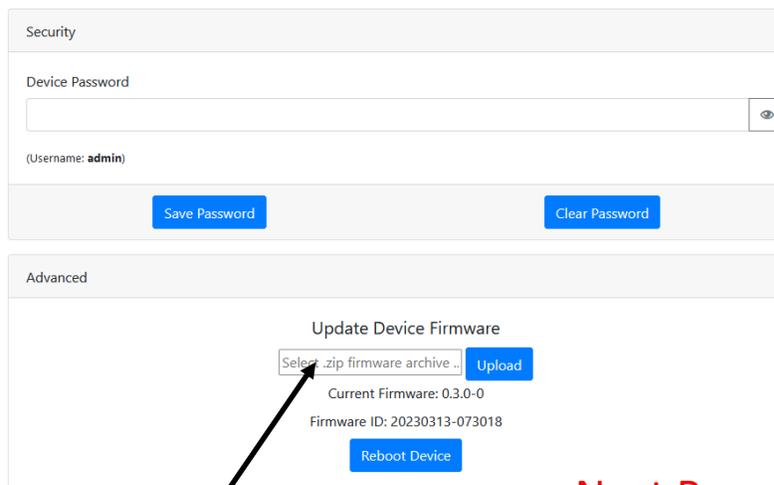


Click the Middle of the "Select Zip Firmware" box

Next Page



Firmware Upgrade Instructions

Window will open. Select the firmware file from wherever you put it on your computer or device.

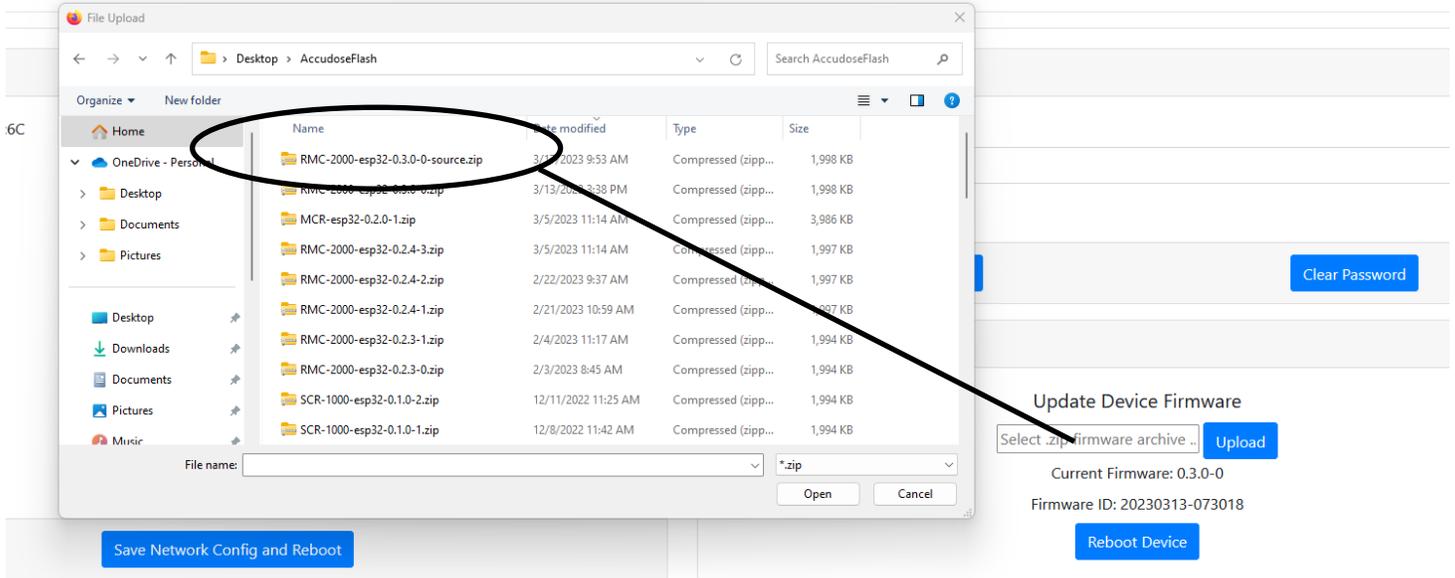

Once the file is in the box hit “Upload”. Let it go for 5 minutes and you will be ready to go.